

GARDENLINE®

XFINITY LI-ION 20V **20 V GARDEN** **MINI TRIMMER**

User Guide Original Instructions



XFINITY PLUS 20V
BATTERY SYSTEM

Compatible with Xfinity Plus
20V Battery System
(Battery and Charger not included)

After Sales Support

Now you have purchased a Gardenline® product you can rest assured in the knowledge that as well as your 5 years parts and labour guarantee you have the added peace of mind of dedicated helplines.

Version: 26-10-2017/1



AFTER SALES SUPPORT



☎ 1300 855 831 📧 support@scheppach.com.au

MODEL:20V Mini Trimmer PRODUCT CODE: 57959 01/2018

5

YEAR
WARRANTY



GARDENLINE® 20 V Mini Trimmer

Warranty Details

REGISTER YOUR PURCHASE AT www.aldi.com.au/en/about-aldi/product-registration/ TO KEEP UP-TO-DATE WITH IMPORTANT PRODUCT INFORMATION

The product is guaranteed to be free from defects in workmanship and parts for a period of 60 months (dependant on product) from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

  1300 855 831

 support@scheppach.com.au

AUS Hotline Costs: Local rate for landline calls*

*Charges may vary dependent upon network operator or mobile network provider.

MODEL: 20V Mini Trimmer PRODUCT CODE: 57959 01/2018




Contents

Description	04
Explanation of symbols	06
I. Introduction	07
II. Layout	08
III. Scope of delivery	08
IV. Intended use	08
V. General Power Tool Safety Warnings	09
VI. Before initial operation	14
VII. Assembling / Changing accessories	15
VIII. Commissioning	15
IX. Technical data	16
X. Maintenance and care	17
XI. Storage and Transport	18
XII. Accessories	18
XIII. Disposal and recycling	19
XIV. Troubleshooting	19
Repair and Refurbished Goods or Parts Notice	23

Description



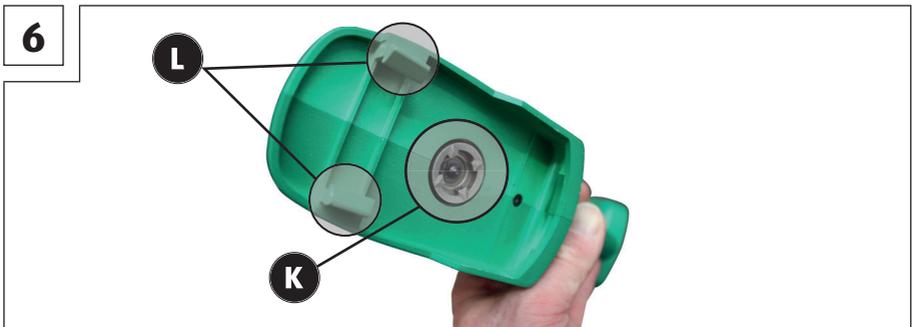

AFTER SALES SUPPORT

Explanation of symbols

The use of symbols in this manual is intended to draw your attention to possible risks. The safety symbols and the explanations that accompany them must be perfectly understood. The warnings in themselves do not remove the risks and cannot replace correct actions for preventing accidents.



General safety warning!



Read operating instructions and safety instructions before commissioning!



Do not expose tool/charger/battery to rain!



Pay attention to the risk of injury caused by flying debris (keep bystanders a safe distance away from work area)



Warning! After switching off the tool the blade continues to move for a few seconds



Guaranteed sound power level



Australian Regulatory Compliance Mark



CAUTION! Sharp cutting tool! Keep hands and feet away from the cutter bar!



Compatible with Xfinity Plus 20V Battery System (Battery and Charger not included)

I. Introduction

Congratulations on choosing to buy a GARDENLINE® product.

All products brought to you by GARDENLINE® are manufactured to the highest standards of performance and safety, and as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 5 Year Warranty. We hope you will enjoy using your purchase for many years to come.

Note:

According to the applicable product liability law the manufacturer of this device is not liable for damages which arise on or in connection with this device in case of:

- improper handling,
- non-compliance with the instructions for use,
- repairs by third party, non-authorized skilled workers,
- installation and replacement of non-original spare parts,
- improper use.

Recommendations:

Read the entire text of the operating instructions prior to the assembly and operation of the device.

These operating instructions are intended to make it easier for you to get familiar with your device and utilise its intended possibilities of use.

The operating instructions contain important notes on how to work safely, properly and economically with your machine and how to avoid dangers, save repair costs, reduce downtime, and increase the reliability and working life of the machine.

In addition to the safety regulations contained herein, you must in any case comply with the applicable regulations of your country with respect to the operation of the machine.

Put the operating instructions in a clear plastic folder to protect them from dirt and humidity, and store them near the machine. The instructions must be read and carefully observed by each operator prior to starting the work. Only persons who have been trained in the use of the machine and have been informed on the related dangers and risks are allowed to use the machine. The required minimum age must be met.

In addition to the safety notes contained in the present operating instructions and the special regulations of your country, the generally recognised technical rules for the operation of generators must be observed.

II. Layout (Fig. 1)

- A Shrub shear blade
- B Safety switch
- C Battery (sold separately)
- D Blade guard for Grass shear blade
- E Battery compartment
- F Trigger switch
- G Grass shear blade
- H Blade guard for Shrub shear blade
- I Tool mount
- J Tool release button
- K Drive unit
- L Tool holder

III. Scope of delivery

- 1x 20V Mini Trimmer
- 1x Shrub shear blade with Blade guard
- 1x Grass shear blade with Blade guard
- 1x Original Instructions

- Open the packaging and remove the device carefully.
- Remove the packaging material as well as the packaging and transport bracing (if available).
- Check that the delivery is complete.
- Check the device and accessory parts for transport damage.
- If possible, store the packaging until the warranty period has expired.

⚠ Attention!

The device and packaging materials are not toys!

Children must not be allowed to play with plastic bags, film and small parts!

There is a risk of swallowing and suffocation!

IV. Intended use

Be sure to observe the restrictions in the safety instructions.

The 20V Mini Trimmer is intended for light trimming of shrubs and lawn edges in domestic use.

⚠ DANGER! Risk of injury!

The 20V Mini Trimmer may not be used for chopping in the sense of composting. With the Shrub shear blade, the 20V Mini Trimmer is not suited for cutting lawns / lawn edges.

Any other use is not as intended. Improper use is not covered by the warranty and the manufacturer will reject any liability. The user is liable for all injuries to third parties and damage to their property. Operate the unit only in the technical condition as stipulated and delivered by the manufacturer. Arbitrary changes to the unit will exclude the manufacturer from any liability for resulting injury and/or damage.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the equipment is used in commercial, trade or industrial businesses or for equivalent purposes.

⚠ For safety reasons, children and young people under the age of 16, as well as people not familiar with these operating instructions, may not use this product. Persons with reduced physical or mental abilities may use the product only if they are supervised or instructed by a responsible person. Children must be supervised to ensure that they do not play with the product.

V. General Power Tool Safety Warnings

⚠ WARNING! Read all safety warnings and all instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

Work area safety

- ❑ **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- ❑ **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**
Power tools create sparks which may ignite the dust or fumes.
- ❑ **Keep children and bystanders away while operating a power tool.**
Distractions can cause you to lose control.

Electrical safety

- ❑ **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.**
Unmodified plugs and matching outlets will reduce risk of electric shock.
- ❑ **Avoid body contact with earthed or grounded surfaces, such as pipes,**

AFTER SALES SUPPORT

radiators, ranges and refrigerators.

There is an increased risk of electric shock if your body is earthed or grounded.

- **Do not expose power tools to rain or wet conditions.**
Water entering a power tool will increase the risk of electric shock.
- **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges and moving parts.** Damaged or entangled cords increase the risk of electric shock.
- **When operating a power tool outdoors, use an extension cord suitable for outdoor use.**
Use of a cord suitable for outdoor use reduces the risk of electric shock.
- **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.**
Use of an RCD reduces the risk of electric shock.

Personal safety

- **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- **Remove any adjusting key or wrench before turning the power tool on.**
A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- **Do not overreach. Keep proper footing and balance at all times.**
This enables better control of the power tool in unexpected situations.
- **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.**
Loose clothes, jewellery or long hair can be caught in moving parts.
- **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.**
Use of dust collection can reduce dust-related hazards.

Power tool use and care

- **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- **Do not use the power tool if the switch does not turn it on and off.**

Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

- **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

Battery tool use and care

- **Recharge only with the charger specified by the manufacturer.**
A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- **Use power tools only with specifically designated battery packs.**
Use of any other battery packs may create a risk of injury and fire.
- **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.**
Shorting the battery terminals together may cause burns or a fire.
- **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.**
Liquid ejected from the battery may cause irritation or burns.

Service

Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

Hedge trimmer safety warnings

- **Keep all parts of the body away from the cutter blade. Do not remove cut material or hold material to be cut when blades are moving. Make sure the switch is off when clearing jammed material.** A moment of inattention while operating the hedge trimmer may result in serious personal injury.
- **Carry the hedge trimmer by the handle with the cutter blade stopped. When transporting or storing the hedge trimmer always fit the cutting device cover.** Proper handling of the hedge trimmer will reduce possible personal injury from the cutter blades.
- **Hold power tool by insulated gripping surfaces only, because the cutter blade may contact hidden wiring.** Cutter blades contacting a “live” wire may make exposed metal parts of the power tool “live” and could give the operator an electric shock.

Additional Safety Recommendations

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Never allow children or people unfamiliar with these instructions to use the machine. Local regulations may restrict the age of the operator. When not in use store the machine out of reach of children.
- The operator or user is responsible for accidents or hazards occurring to other people or their property.
- Never operate the machine while people, especially children or pets, are nearby.
- Personal protective equipment at all times while operating the machine.
- Avoid trimming in bad weather conditions especially when there is a risk of lightning.
- Use the machine only in daylight or good artificial light.
- Check if guards and protective devices are undamaged and properly mounted. Before using, carry out any necessary maintenance and repairs.
- Switch on the motor only when the hands and feet are away from the cutting means.
- Always disconnect the machine from the power supply (i. e. remove the battery/accu):
 - whenever you leave the machine,
 - before clearing a blockage,
 - before checking, cleaning or working on the machine,
 - after striking a foreign object. Inspect the machine for damage and make repairs as necessary,
 - if the machine starts to vibrate abnormally (check immediately).

Warning! This machine produces an electromagnetic field during operation. This field may under some circumstances interfere with active or passive medical implants. To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their physician and the medical implant manufacturer before operating this machine.

Thoroughly inspect the area where the product is to be used and remove all wires and other foreign objects. All adjustments have to be made with the Blade guards in place, and the 20V Mini Trimmer must not rest on the blade in the process. Before using the machine and after any impact, check for signs of wear or damage and repair as necessary.

If the device can no longer be switched off in the event of a defect, place the device on a solid surface and monitor it until the battery is empty. Send the defective device to our Service Centre.

Never attempt to use an incomplete product or one with an unauthorised modification.

Power tool use and care

Know how to stop the product quickly in an emergency.

Never hold the product by the guard.

Do not use the 20V Mini Trimmer if the protection equipment (protection cover, Safety switch) are damaged.

Do not use ladders whilst operating the product.

Take care against injury to feet and hands from the cutting means.

Protect the power tool against heat, e. g., against continuous intense sunlight, fire, water, and moisture. Danger of explosion.

Do not open the machine. There is danger of explosion when short-cutting the battery.

In case of damage and improper use of the battery, vapours may be emitted. Ventilate the area and seek medical help in case of complaints. The vapours can irritate the respiratory system.

If the battery becomes defective, liquid can escape and come into contact with adjacent components. Check any parts concerned. Clean such parts or replace them, if required.

Maintenance and storage

⚠ RISK OF INJURY! Do not touch blades.

- When work is finished or interrupted, refit the protective blade guard.

Keep all nuts, bolts and screws secure to be sure the 20V Mini trimmer is in safe working condition.

Battery safety

⚠ FIRE RISK!

The battery to be charged must be placed on a non-flammable, heat resistant and non-conductive surface while charging. Keep corrosive, flammable and easily combustible objects clear of the battery charger and the battery. Do not cover the battery charger and the battery while charging. Unplug the battery charger immediately in the event of smoke formation or fire.

Only use the original Battery Charger for charging. The use of other battery chargers may damage the batteries irreparably and even cause a fire.

⚠ RISK OF EXPLOSION!

- Protect 20V Mini Trimmer from heat and fire. Do not leave on radiators or expose to strong sunshine for long periods.

⚠ Do not use the battery charger outdoors.

- Protect the battery charger from damp or wet areas.

Only use your 20V Mini Trimmer in an ambient temperature between $-10\text{ }^{\circ}\text{C}$ and $+45\text{ }^{\circ}\text{C}$.

A non-functioning battery must be disposed of correctly.

It may not be sent via post. For further details, please contact your local disposal companies.

The battery charger should be checked regularly for signs of damage or ageing (brittleness) and may only be used if it is in perfect condition.

After charging, disconnect the charger from the mains and from the battery.

Only charge battery between $10 - 45\text{ }^{\circ}\text{C}$.

After heavy duty service allow battery to cool down first.

Storage

The 20V Mini Trimmer must not be stored over $25\text{ }^{\circ}\text{C}$ or under direct exposure to sunlight.

Do not store the 20V Mini Trimmer in places with static electricity.

VI. Before initial operation

Unpack the 20V Mini Trimmer and accessories and check that no parts are missing or damaged.

IMPORTANT: Battery and Charger (Xfinity 20V 2.0Ah Li-Ion battery / Xfinity 20V Li-Ion charger) are not included!

NOTE

The battery is not fully charged on delivery. Prior to initial operation, charge the battery fully. See user manual of the battery charger.

Inserting/removing the battery (C) (Fig. 4/5)

1. The battery (C) is inserted in the tool by pushing it into the battery compartment slot (E). The battery (C) should snap fully in place so that the clips lock.
2. Remove the battery (C) by pressing in the clips and pulling out the battery (C) from the tool.

⚠ CAUTION!

Protect the battery contacts when the battery is not being used. Loose metal parts may short-circuit the contacts – Explosion and fire hazard!

VII. Assembling / Changing accessories

⚠ WARNING!

The blades are sharp, be careful when changing them. Risk of personal injury.

Dismantling (Fig. 2/3)

- Press in the Tool release buttons (J) and remove the accessory from the tool.

(Fig. 6)

The Drive unit (K) becomes visible when the accessory comes off. Make sure that no impurities or foreign objects get into the Drive unit (K) when changing accessories.

Assembly (Fig. 2/3)

1. Press in the Tool release buttons (J) and fit the accessory onto the tool.
2. Release the Tool release buttons (J). The accessory is now firmly fixed on the tool.

VIII. Commissioning

NOTE:

Before starting to work, clear the work area from any stones or other solid objects that can damage the blades.

Starting/switching off

1. Start the 20V Mini Trimmer by first pressing forward the Safety switch (B) and then pressing the Trigger switch (F).
2. Release the Trigger switch (F) to switch off the 20V Mini Trimmer.

⚠ WARNING!

After release the Trigger switch (F), the cutter bar continues running briefly. Risk of injury!

Lawn trimming

- Use Grass shear blade (A)
- For best results the lawn should be dry.
- Allow the 20V Mini Trimmer to glide over the ground.
- Sharpen the blades as soon as the results of the trimming deteriorate.

Hedge trimming

- Use Shrub shear blade (G)
- The 20V Mini Trimmer can be used to trim small hedges and bushes.
- Angle the 20V Mini Trimmer slightly in the direction in which the hedge is to be trimmed. Trim the sides of the hedge, from below and up, and trim the top last.
- Watch out for foreign objects in or on the hedge – risk of damaging the blades.

When should hedges be trimmed?

- Deciduous hedges should normally be trimmed in June and October.
- Evergreen hedges should be trimmed in April and August.

IX. Technical data

Typ	20V Mini Trimmer
Nominal voltage	20 V d.c. / 2.0 Ah
Model Battery / Charger	Xfinity 20V 2.0Ah Li-Ion battery Xfinity 20V Li-Ion charger
No Load Speed	1200 min ⁻¹
Running Time (no load) approx.	90 min
Cutting width Grass shear	92 mm
Max branch thickness	Ø 8 mm
Cutting length, Shrub shear	199 mm
Weight with Grass shear blade	1.1 kg
Weight with Shrub shear blade	1.4 kg

Sound and vibration

The noise and vibration values were developed using a standard measuring method.

Sound pressure level L_{pA}	61.9 dB(A)
Sound pressure level L_{WA} (measured)	83 dB(A)
Sound power level L_{WA} (guaranteed)	96 dB(A)
Uncertainty K_{WA}	1.02 dB(A)
Vibration a_h	2.0 m/s ²
Uncertainty K	1.5 m/s ²

- Only use appliances which are in perfect working order.
- Service and clean the appliance regularly.
- Adapt your working style to suit the appliance.
- Do not overload the appliance.
- Have the appliance serviced whenever necessary.
- Switch the appliance off when it is not in use.
- Wear protective gloves.

X. Maintenance and care

⚠ WARNING!

Before performing any maintenance and cleaning work on the 20V Mini Trimmer, remove the battery. Sharp cutting tool! Wear protective gloves.

Cleaning

- Keep the safety devices, ventilation openings and the motor housing free from dust and dirt. Wipe the 20V Mini Trimmer clean with a clean cloth, or carefully blow clean with compressed air.
- It is always best to clean the 20V Mini Trimmer immediately after use.
- Clean the 20V Mini Trimmer regularly with a cloth moistened with a soap solution. Do not use detergent that contains solvent or corrosive, abrasive additives – risk of damaging the surface of the 20V Mini Trimmer. Make sure that no water gets into the 20V Mini Trimmer.
- Lubricate the blades with a few drops of thin oil (e.g. sewing machine oil) for better functionality and performance. Residual grass and dirt between the top and bottom blades should be removed to maintain best results and precise trimming.
- Keep the blades sharp and in good condition. The blades can be sharpened with a whetstone. It is especially important to remove nicks and burrs caused by stones and other foreign objects.
- The tool has no internal parts that can be maintained by the user.

AFTER SALES SUPPORT

⚠ WARNING!

Never clean power tools under running water, or with high-pressure washers or the equivalent – risk of personal injury and material damage.

Repairs

Check the unit for damage. Repairs may be carried out by an authorised customer service centre only.

Sharpening the cutting blades**⚠ Remove battery from tool!**

- Remove cutting blades from tool before sharpening.
- Sharpen the cutting blades with a small and smooth file, in case a solid object damaged them.
- We advise you, however, to have the blades sharpened by a specialist.
- Lubricate the cutting blades after sharpening.

XI. Storage and Transport

General information

- Store the unit in a dry and frost-free and well ventilated place, out of the reach of children (10-25 °C).
- Store the battery and the unit separately.
- Charge the battery before storing the unit in winter.
- Keep the unit, in particular its plastic components, away from brake fluids, petrol, petroleum products, penetrating oil, etc. They contain chemical substances which may damage, attack or destroy the plastic components of the unit.
- Fertilisers and other garden chemicals contain substances which may have a highly corrosive effect on the metal parts of the unit. Therefore do not store your unit near these substances.

After use

Carry the 20V Mini Trimmer by the handle with the cutting blades stopped and, when transporting or storing the tool, always mount the blade guards (proper handling of the tool will reduce possible personal injury from the cutting blades)

XII. Accessories

Service information

Please note that the following parts of this product are subject to normal or natural wear and that the following parts are therefore also required for use as consumables.

Wear parts: Shrub shear blade, Grass shear blade, Drive unit

XIII. Disposal and recycling

The package protects the appliance against damage during transport. Packing materials are usually chosen depending on their environmental friendliness and disposal method and can therefore be recycled. Returning the package to material circulation saves raw materials and reduces waste disposal costs. Parts of packages (e.g. foils, styropor®) can be dangerous to children. Risk of suffocation! Keep parts of packages away from children and dispose them as soon as possible.

XIV. Troubleshooting

The following listing shows problem symptoms, possible causes and corrective actions (if these do not identify and correct the problem, contact your dealer or service station).

Attention! Switch off the tool and remove the battery before investigating the problem.

Problem	Possible Cause	Solution
Tool operates intermittently	Internal wiring defective Trigger switch defective	Contact dealer/service station Contact dealer/service station
Motor runs but blades remain stationary	Internal fault	Contact dealer/service station
Cutting blades hot	Cutting blades blunt Cutting blades have dents Too much friction due to lack of lubricant	Have blades sharpened Have blades inspected Lubricate blades

X FINITY PLUS 20V BATTERY SYSTEM

The XFINITY battery System has more than 20 tools that work with the same battery platform, giving you the ultimate versatility in tool selection to get your job finished. With LITHIUM powered batteries, you can get more done in less time and improve the performance of every XFINITY powered WORKZONE® or GARDENLINE® tool ever made. Watch out for more XFINITY tools coming soon.



AFTER SALES SUPPORT

21

  1300 855 831

 support@schepach.com.au

MODEL: 20V Mini Trimmer PRODUCT CODE: 57959 01/2018



GARDENLINE®
20V Mini Trimmer

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 855 831 or write to us at:

RossMac Pty. Ltd.

P.O. Box 261, Essendon North, Victoria, 3041

Telephone 1300 855 831

Opening hours: Monday - Friday 9:00am-5:00pm

Email: support@scheppach.com.au

AFTER SALES SUPPORT

  1300 855 831

AUS Hotline Costs: Local rate for landline calls*

*Charges may vary dependent upon network operator or mobile network provider.

 support@scheppach.com.au

MODEL: 20V Mini Trimmer PRODUCT CODE: 57959 01/2018



GARDENLINE[®]



ROSSMAC PTY. LTD.
P.O. BOX 261, ESSENDON NORTH, VICTORIA, 3041